


REPAIR PARTS FOR BROADCAST SPREADER MODEL 45-02152

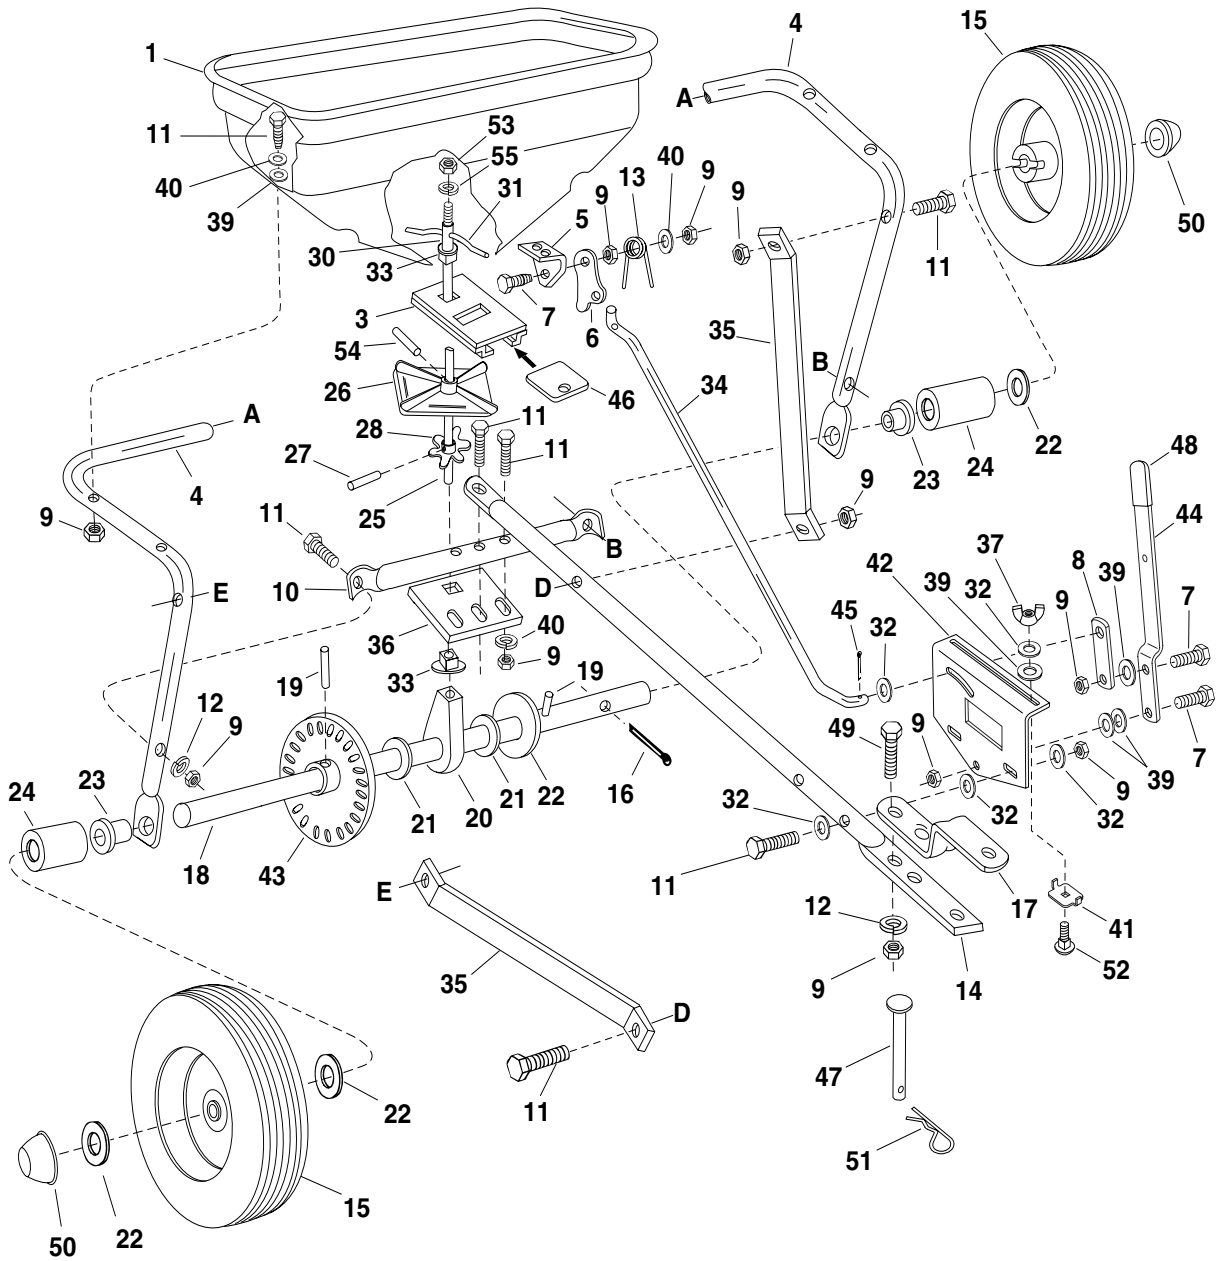

REPAIR PARTS FOR BROADCAST SPREADER MODEL 45-02152

REF. NO.	PART NO.	QTY.	DESCRIPTION	REF. NO.	PART NO.	QTY.	DESCRIPTION
1	44624	1	Hopper	30	23766	1	Sleeve, Agitator
2	43882	4	Rivet, Stainless	31	43878	1	Wire, Agitator
3	62482	1	Ass'y, Guide Closure	32	R19111116	8	Washer, 5/16 SAE
4	44588	1	Tube, Frame	33	44285	2	Bushing, Delrin
5	23753	1	Slide Gate Angle Bracket	34	44469	1	Rod, Flow Control
6	23758	1	Slide Gate Bracket	35	23525	2	Brace, Hitch
7	43012	3	Bolt, Hex 1/4-20 x 3/4" Lg.*	36	23780	1	Support, Shaft
8	24857	1	Flow Control Link	37	47141	1	Nylon Wing Nut, 1/4-20 Thd.
9	43013	22	Nut, Hex Lock 1/4-20 Thd. *	38	43866	2	Bolt, Hex 1/4-20 x 5/8" Lg. Gr. 5
10	44591	1	Tube, Crossover	39	1543-069	10	Washer, Nylon
11	43648	16	Bolt, Hex 1/4-20 x 1-1/2" Lg.	40	43088	13	Washer, Flat 1/4" Std.
12	43177	4	Washer, Lock 1/4" I.D.*	41	24858	1	Adjustable Stop
13	44566	1	Spring, Torsion	42	24855	1	Bracket, Flow Control Mount
14	44586	1	Tube, Hitch	43	46885	1	Gear, Plastic
15	47052	2	Wheel	44	24859	1	Flow Control Arm
16	47063	1	Cotter Pin. 5/32" x 2"	45	44101	1	Cotter Pin 3/32" x 3/4" Lg.*
17	23818	1	Bracket, Hitch	46	23533	1	Plate, Closure
18	24407	1	Shaft, Axle	47	47623	1	Hitch Pin
19	44665	2	Pin, Spring 5/32" Dia. x 1-1/4" Lg.	48	43848	1	Grip, Flow Control Arm
20	44672	1	Bushing, Axle Shaft	49	43661	2	Bolt, Hex 1/4-20 x 1" Lg. *
21	44137	4	Washer, Shim 1/2"	50	44663	2	Hub Cap
22	R19171616	4	Washer, Flat 1/2"	51	43343	1	Hair Cotter Pin, #4 1/8"
23	741-0248	2	Bearing, Flange	52	44950	1	Bolt, Carriage 1/4-20 x 3/4" Lg.
24	46501	2	Tube, Spacer	53	43015	1	Nut, Hex 3/8-16 Thd.*
25	23524	1	Shaft, Sprocket	54	46055	1	Pin, Spring 1/8" Dia. x 1" Lg.
26	04367	1	Spreader Plate	55	43003	1	Lock Washer, 3/8"
27	43850	1	Pin, Spring 1/8" Dia. x 5/8" Lg.		48321	1	Owner's Manual
28	44468	1	Sprocket, 6 Tooth				
29	C-9M5732	2	Pop Rivet				

*Purchase common hardware locally.