


REPAIR PARTS FOR 45-0462, 45-0471 130 LB. PUSH SPREADER

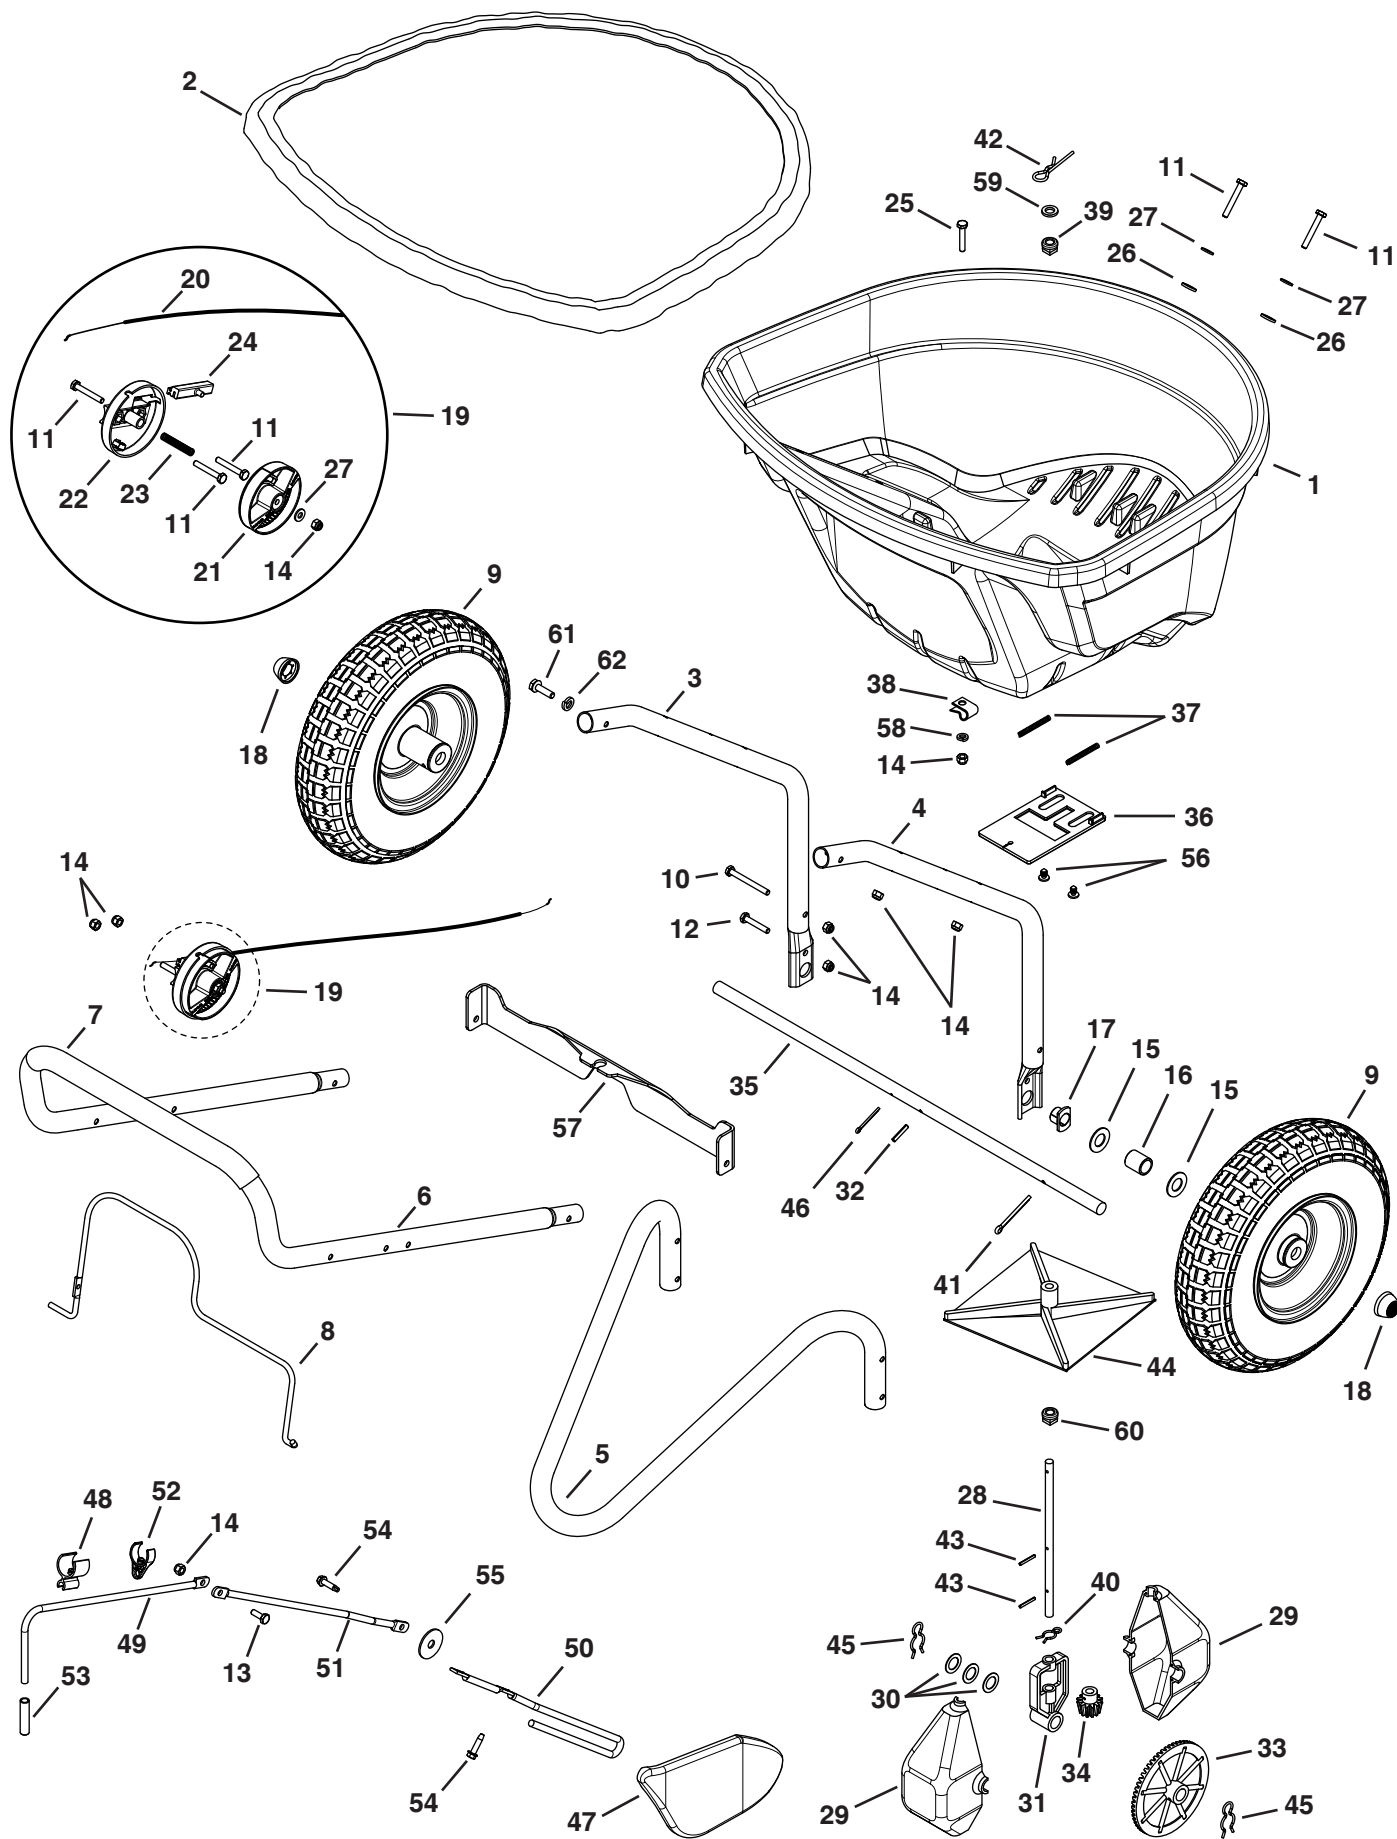

REPAIR PARTS FOR 45-0462, 45-0471 130 LB. PUSH SPREADER

REF	QTY	PART NO	DESCRIPTION	REF	QTY	PART NO	DESCRIPTION
1	1	41084	Hopper	32	1	43659	Pin, Spring 3/16 x 1
2	1	41316	Hopper Cover (45-0471)	33	1	47209	Gear, Large
3	1	41097	Tube, Hopper Support LH	34	1	47205	Gear, Small
4	1	41096	Tube, Hopper Support RH	35	1	26710	Shaft, Axle Spreader
5	1	42004	Tube, Stand	36	1	41090	Plate, Flow
6	1	42006	Tube, Handle	37	2	42011	Spring, Flow Plate
7	1	42115	Grip, Foam (45-0471 only)	38	1	41196	7/32" Conduit Clip
8	1	42012	Bail, Flow Control	39	1	44285	Bushing, Hopper Bottom Black
9	2	40880	Wheel	40	1	49898	Clip, Hairpin 5/8
10	2	49870	Bolt, Hex 1/4-20 x 2-1/2	41	1	46855	Pin, Cotter 3/16" x 2"
11	7	1509-69	Bolt, Hex 1/4-20 x 1-3/4	42	1	48934	Hairpin, Agitator
12	2	43648	Bolt, Hex 1/4-20 x 1-1/2	43	2	46055	Pin, Spring 1/8 x 1
13	1	43012	Bolt, Hex 1/4-20 x 3/4 (45-0471)	44	1	04367	Spreader Impeller
14	12	47189	Nut, Hex 1/4-20 Nylock (45-0462)	45	2	49897	Clip, Hairpin 7/8
	13	47189	Nut, Hex 1/4-20 Nylock (45-0471)	46	1	43010	Pin, Cotter 1/8 x 1-1/4
15	4	R19212016	Washer, .6562 x 1.25 x .0598	47	1	41086	Side Deflector (45-0471)
16	2	48857	Spacer, .64 ID x .84 OD x 1.00	48	1	41089	Clamp, Push Rod (45-0471)
17	2	40315	Bearing, Flat Sided Flange	49	1	41094	Push Rod (45-0471)
18	2	48499B	Hub Cap	50	1	41099	Deflector Rod (45-0471)
19	1	66866	Flow Control (incl. items 20 - 24)	51	1	42186	Connecting Rod (45-0471)
20	1	41093	Cable, Flow Control (ref 66866)	52	1	42188	Eye Clamp (45-0471)
21	1	41087	Dial, Flow Control (ref 66866)	53	1	47317	Grip, 2" (45-0471)
22	1	41088	Housing, Flow Control (ref 66866)	54	2	HA23740	Screw, 1/4-20 Tapping (45-0471)
23	1	42007	Spring, Flow Control (ref 66866)	55	1	141	Washer, .378 x 1.25 x .061 (45-0471)
24	1	41092	Shuttle, Flow Control (ref 66866)	56	2	48402	Plug, 1/4" (Christmas Tree)
25	1	1509-90	Bolt, Hex 1/4-20 x 1-1/4	57	1	27170	Cross Brace
26	4	1543-69	Washer, Nylon .3281 x .75	58	1	43177	Lock Washer, 1/4"
27	5	43088	Washer, 1/4 Std .312 x .734	59	1	23625	Spacer
28	1	26711	Shaft, Spreader	60	1	741-0475	Bushing, 3/8" Plastic
29	2	47212	Housing, Large Gear	61	2	47856	Screw, 5/16 x 3/4"
30	3	44125	Washer, .625 x 1.0 x .03	62	2	43086	Lock Washer, 5/16"
31	1	47204	Yoke, Large		1	41178	Owner's Manual