



REPAIR PARTS FOR MODEL 45-0308, 810-218 5 HP TOW BEHIND TILLER

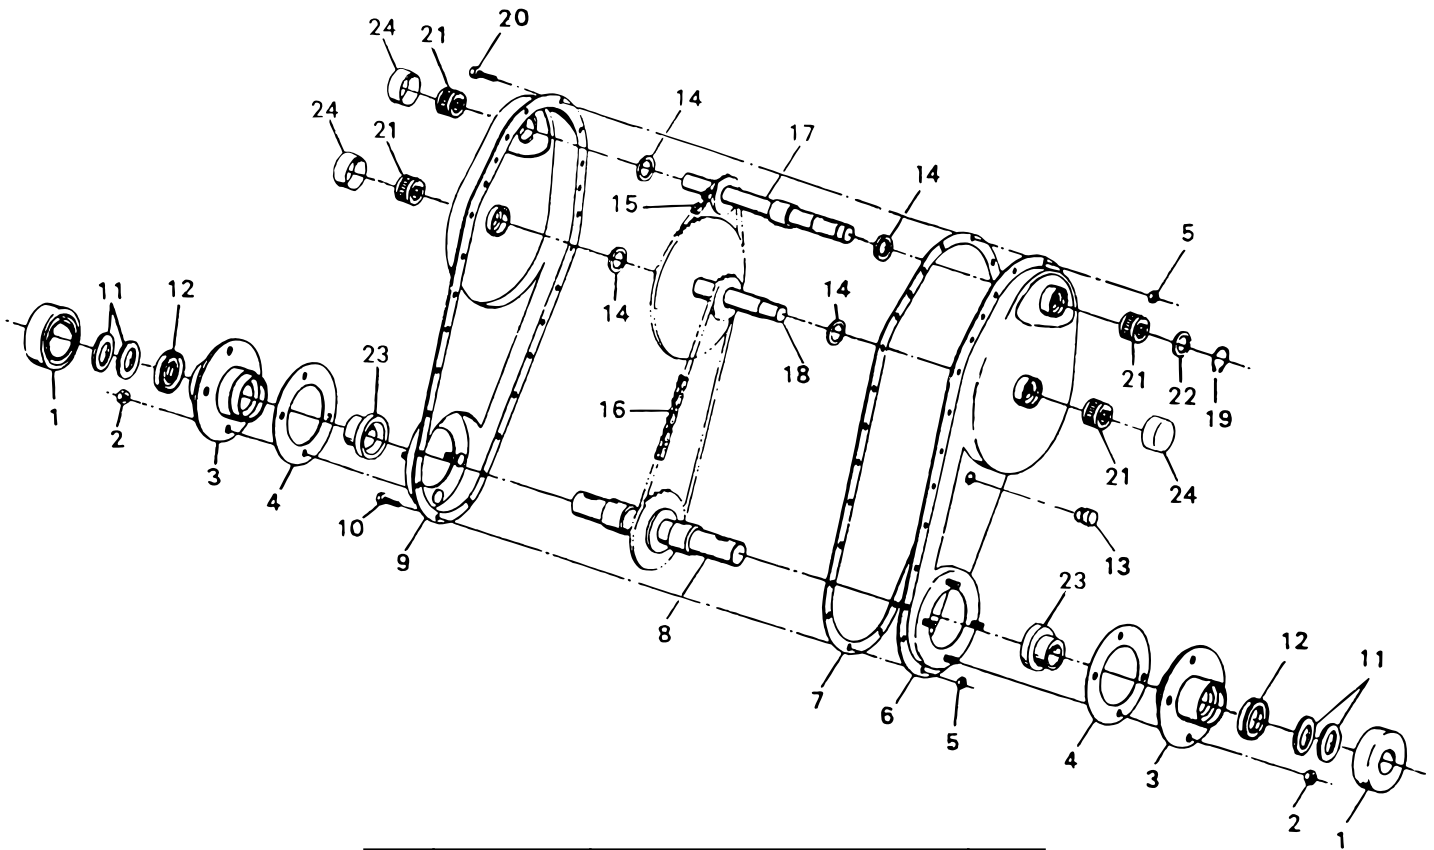

Ref. No.	Part Number	Description	Qty. Req.
1	HA20344	Dust Cap	2
2	*GM-9413227	Locknut, 5/16-18	8
3	HA20123	Flange & Bearing Assy	2
4	HA20122	Gasket, Flange	2
5	HA4119	Locknut, 1/4-20 Hex	17
6	HA20120	Drive Housing & Bearing Assy - LH	1
7	HA20136	Gasket, Drive Housing	1
8	HA20127	Tine Shaft Assy	1
9	HA20121	Idler Pulley Assy	1
10	43866	Bolt, Hex 1/4-20 x 5/8" Grade 8	15
11	HA20125	Washer, Felt	4
12	HA20124	Seal, Rubber	2
13	HA20130	Plug, Transmission Oil	1
14	HA20129	Washer, Thrust	4
15	HA20132	Chain Assembly #40	1
16	HA20128	Chain Assembly #50	1
17	HA20133	Input Shaft Assembly	1
18	HA20131	Idler Shaft Assembly	1
19	HA20135	Ring, Retainer 5/8" Dia. Shaft	2
20	1509-90	Bolt - 1/4-20 x 1-1/4" Hex Head	2
21	HA20137	Bearing	4
22	HA20145	Seal	1
23	HA20156	Bearing, Flange	2
24	HA20138	Cap, Bearing	3

*Standard Hardware - Purchased Locally

REPAIR PARTS FOR MODEL 45-0308, 810-218 5 HP TOW BEHIND TILLER

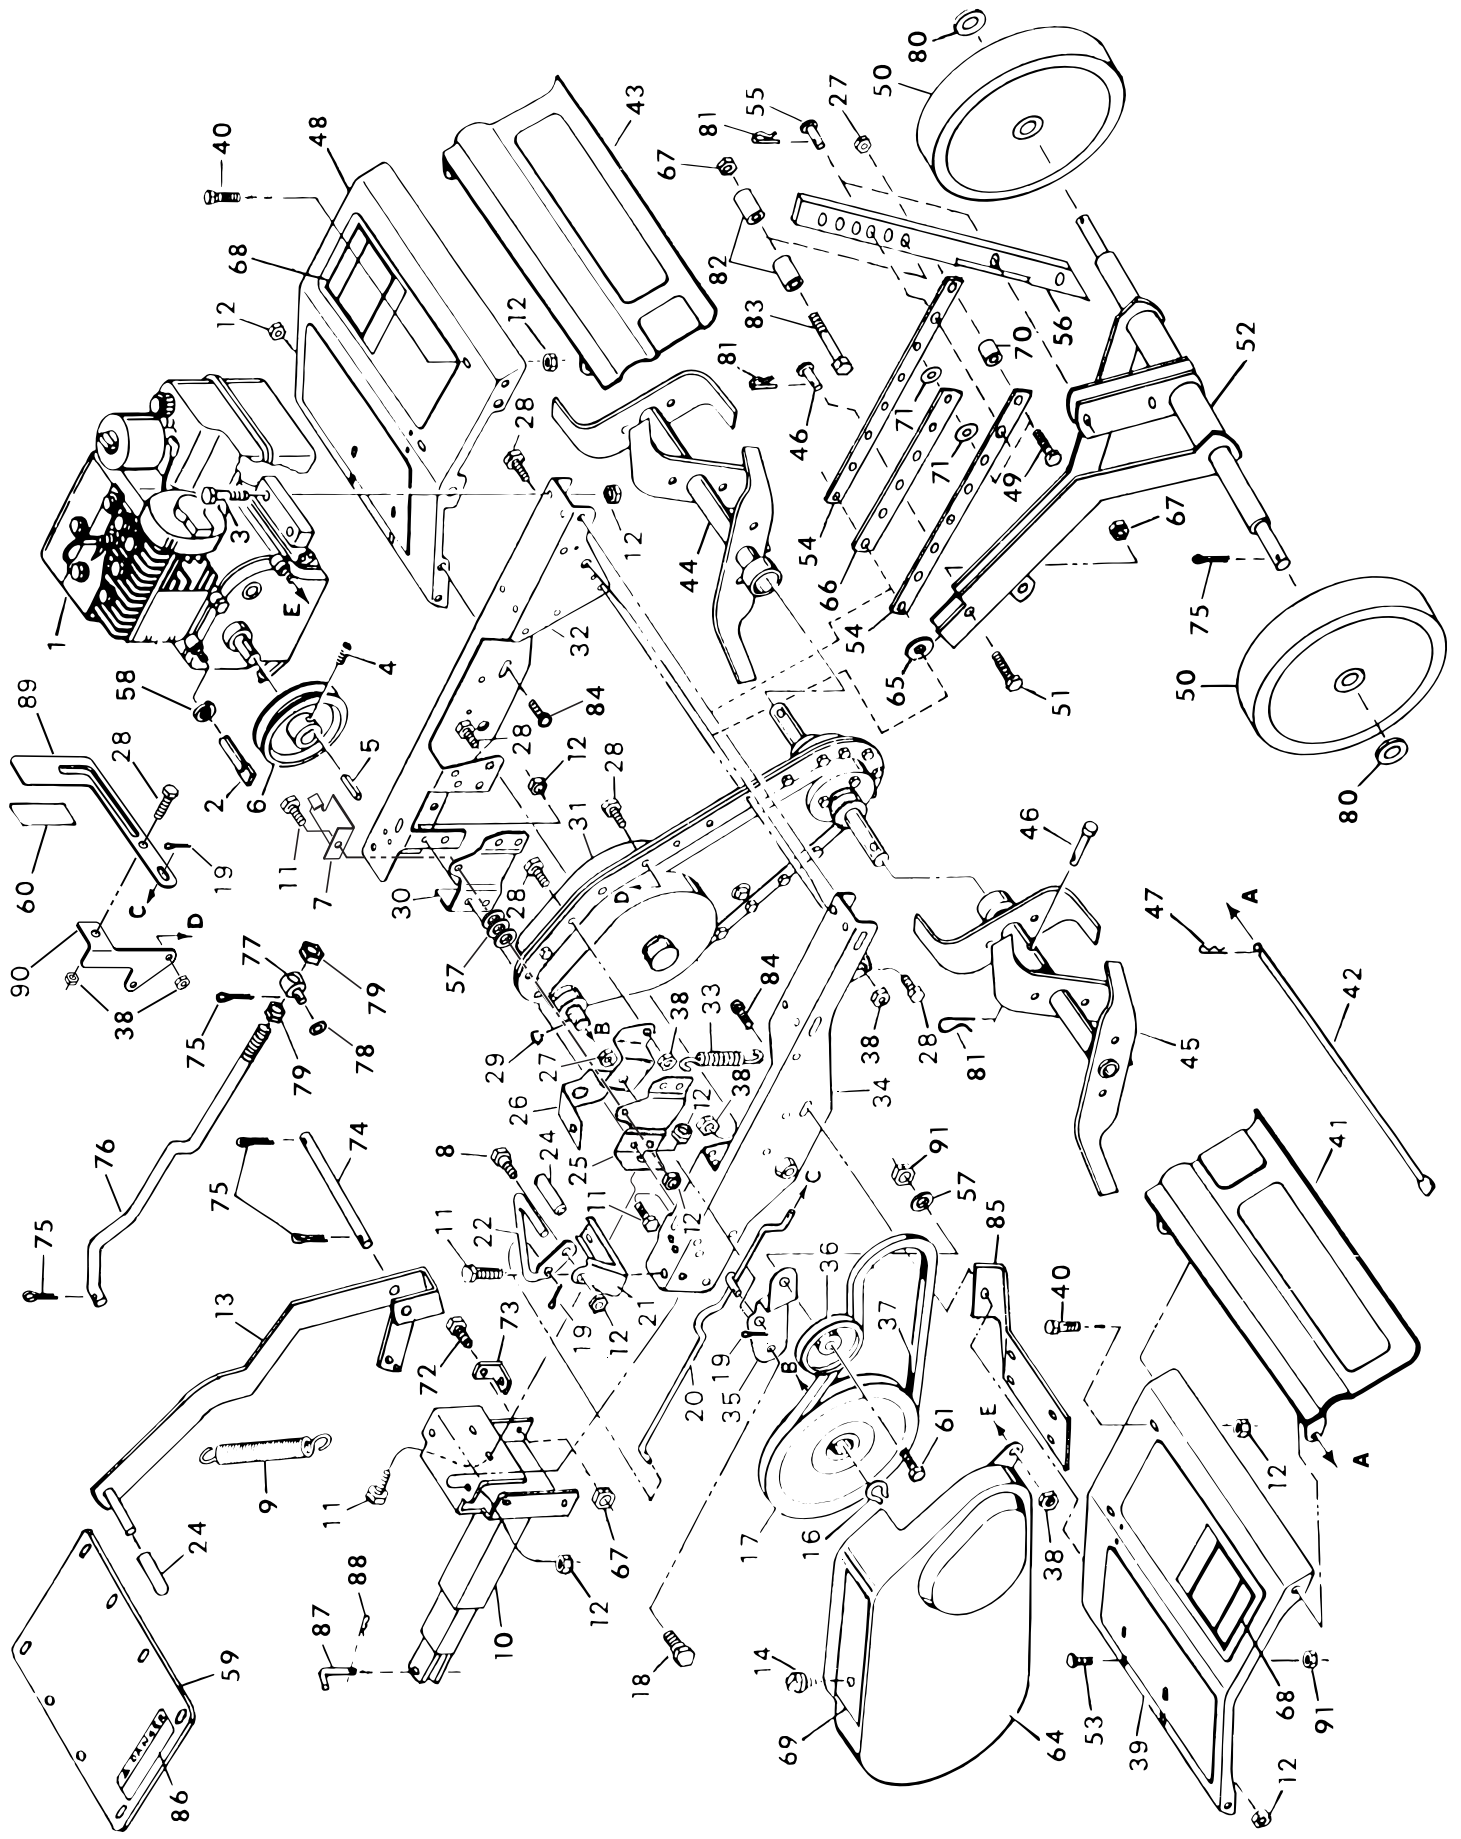

REPAIR PARTS FOR MODEL 45-0308, 810-218 5 HP TOW BEHIND TILLER

Ref. No.	Part Number	Description	Qty. Req.
1	HA24000	Engine	1
2	HA22819	Guide - Belt	1
3	43085	Bolt, 5/16-18 x 1-1/2" Hex Head	4
4	HA115321	Screw, 5/16-18 x 5/16" Cup Pt. Set	1
5	HA11154	Key, Square 3/16" x 2"	1
6	HA20176	Pulley	1
7	HA23738	Bracket, Lift Stop	1
8	HA20169	Bolt - Shoulder	1
9	HA19860	Spring, Depth Extension	1
10	HA20701	Hitch Bracket Assembly	1
11	43063	Bolt, 5/16-18 x 1" Hex Head	10
12	43064	Locknut, 5/16-18 Hex	25
13	HA20679	Lift Handle Assembly	1
14	HA15683	Screw, Self-Tapping 1/4" x 1/2"	1
16	HA20135	Ring, Retainer	1
17	HA20184	Pulley, Input	1
18	HA20178	Bolt - Shoulder	1
19	HA103373	Pin, Cotter 3/32" x 3/4"	1
20	HA20180	Clutch Rod Assembly	3
21	HA20167	Bracket, Clutch Control	1
22	HA20168	Lever, Clutch	1
24	HA20170	Grip, Handle	2
25	HA20162	Bracket, Guide - LH	1
26	HA20134	Bracket, Belt Guide & Idler Mounting	1
27	43082	Locknut, 3/8-16 Hex	10
28	43661	Bolt, 1/4-20 x 1" Hex Head	7
29	HA20185	Key, Woodruff No. 61	1
30	HA20163	Bracket, Guide - RH	1
31	HA20119	Transmission - Complete	1
32	HA20160	Chassis, Left	1
33	HA20186	Spring, Extension	1
34	HA20159	Chassis, Right	1
35	HA23258	Bracket, Idler	1
36	HA11496	Pulley, Idler	1
37	HA20187	V-Belt	1
38	HA4119	Nut, 1/4-20 Hex Lock	8
39	HA20936	Tine Shield Assembly - LH	1
40	43182	Bolt, 5/16-18 x 3/4" Hex Hd.	8
41	HA20112	Rear Guard Assembly - LH	1
42	HA20118	Connecting Pin, Rear Guard	2
43	HA20113	Rear Guard Assembly - LH	1
44	HA20094	Tine & Hub Assembly - RH	1
45	HA20088	Tine & Hub Assembly - LH	1
46	HA10070	Pin, Clevis	4
47	HA3430	Hair Cotter Pin	2
48	HA20935	Tine Shield Assembly - RH	1
49	43062	Bolt, 3/8-16 x 1-1/2" Hex Head	4
50	HA20918	Wheel	2
51	R74780828	Bolt, 1/2-13 x 1-3/4" Hex Head	1
52	HA20670	Pivot Axle Assembly	1
53	*GM-126227	Bolt, 3/8-16 x 3/4" Carriage	4
54	HA20725	Strap Frame Extension	2
55	HA3433	Pin, Clevis	2
56	HA20690	Stake, Drag	1
57	HA446363	Washer	1
58	43177	Lockwasher, 1/4" Med.	1
59	HA20316	Plate, Fender Support	1
60	HA20941	Decal, Caution Flag	1
61	41576	Bolt - 3/8-16 x 1-3/4" Hex Head	1
64	HA20704	Belt Guard (incl. #69)	1
65	HA14306	Washer	1
66	HA20691	Strap-Frame Extension Brace	1
67	43262	Nut, 1/2-13 Hex Lock	3
68	HA20938	Decal, Danger	2
69	HA20942	Decal	1
70	HA5713	Spacer	1
71	HA15200	Washer	2
72	HA180173	Bolt, 1/2-13 x 1" Hex Head	1
73	HA13780	Anchor - Spring	1
74	HA21366	Rod - Lift Anchor	1
75	HA120123	Pin - 1/8" x 1-1/4" Cotter	6
76	HA20688	Rod - Lift	1
77	HA19649	Anchor - Adjustment	1
78	HA120396	Washer - 17/32" x 1-1/6" x .095" Flat	1
79	HA124934	Nut - 1/2-20 Hex Jam	2
80	HA456151	Washer - 13/16" x 1-1/2" x .134" Flat	2
81	HA20481	Pin - Hair Cotter	6
82	HA7974	Spacer	2
83	HA445608	Bolt, 1/2-13 x 5-1/2" Hex Head	1
84	44326	Bolt, 5/16-18 x 1" Carriage	2
85	HA20932	Bracket - Wheel Weight Support	2
86	HA20940	Decal, Danger	1
87	HA5236	Pin - Locating	1
88	HA3341	Pin - Hair Cotter	1
89	HA20173	Flag, Caution	1
90	HA20172	Bracket, Caution Flag	1
91	HA21362	Nut, Hex Nylock 3/8-16	9
NP	HA24038	Owner's Manual	1

*Standard Hardware - Purchased Locally