

Quick Start Guide
45-06281 Sprayer

Read the manual that came with your Sprayer for:

- Important safety warnings
- Further explanation of features
- Operating instructions

Problem?
Call 1-800-448-9282





Quick Start Guide
45-06281 Sprayer

Read the manual that came with your Sprayer for:

- Important safety warnings
- Further explanation of features
- Operating instructions

Problem?
Call 1-800-448-9282

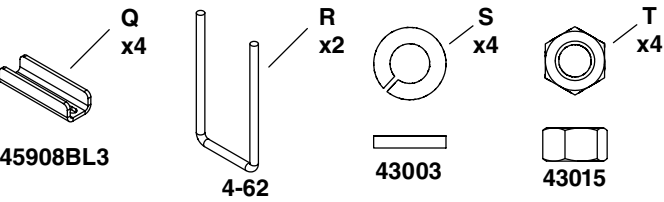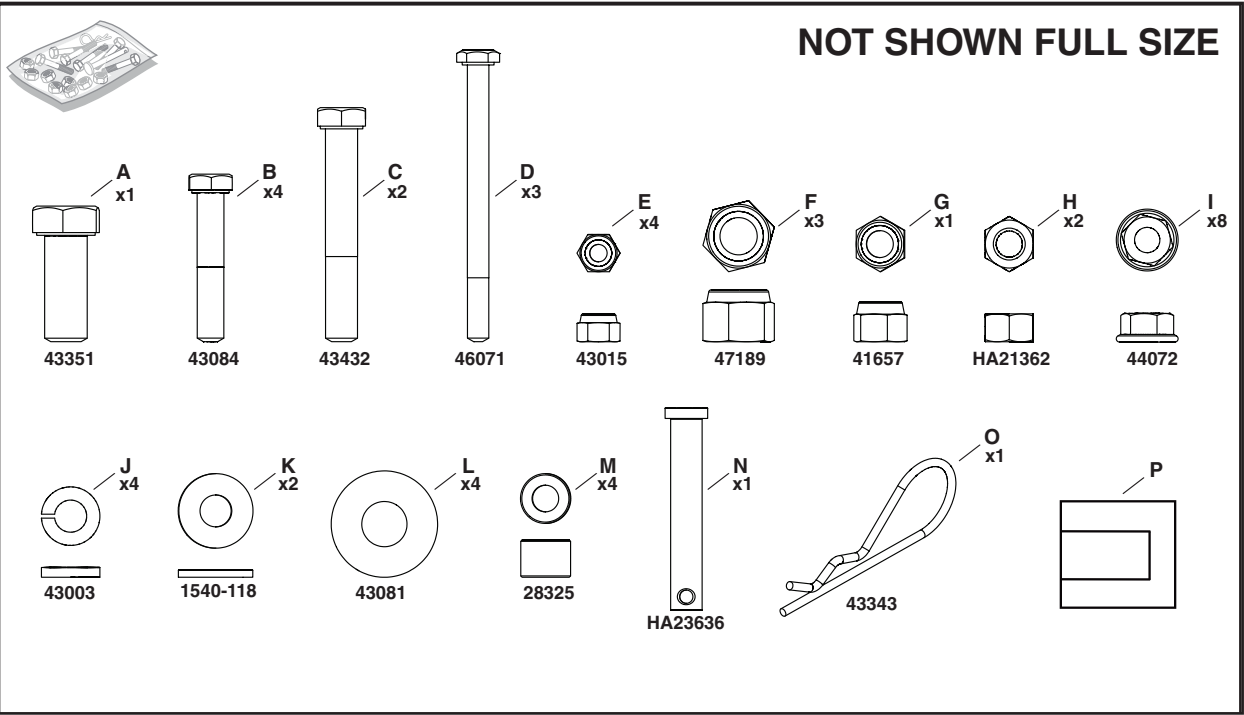

REF	QTY	PART NO	DESCRIPTION
Q	4	45908BL3	Bracket, Mounting
R	2	4-62	U-Bolt. 8" x 3.5" x 3/8"
S	4	43003	Washer, Lock 3/8"
T	4	43015	Nut, Hex 3/8-16


SPACER KIT ASSEMBLY
INSTRUCTIONS

Depending on your mower, the included spacer kit may be required to ensure the hitch mount assembly attaches to your mower without interference. If you used the single or double spacer assembly on this page, skip to Step 3. If you don't need the spacers, start assembly using Step 1.

SINGLE SPACER ASSEMBLY

- Place mounting bracket (Q) flat onto zero turn front frame. Open side of bracket facing up.
- Place the hitch mount assembly (8) on the mounting bracket (Q)
- Using two U-bolts (R) secure the hitch mount assembly (8) with two mounting brackets (Q), four washers (S), and four hex nuts (T). Do not tighten.
- If the slider tube does not fully extend into both U-bolts (R), then loosen the appropriate hex bolt (C) and reposition the slider tube (7).
- Center the hitch mount assembly on the tractor frame.
- Tighten all hex bolts and hex nuts.


Note: Depending on your mower, U-bolts may need to be installed at an angle.

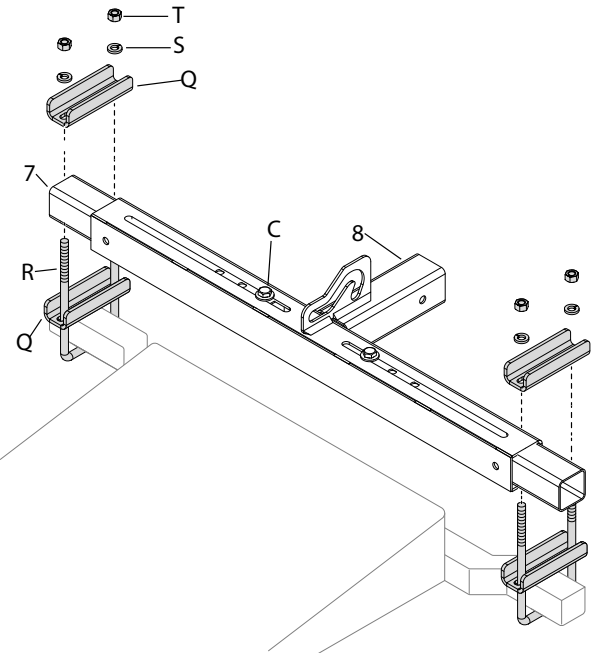

DOUBLE SPACER ASSEMBLY

- Place mounting bracket (Q) onto zero turn front frame. Open side of bracket facing down.
- Place second mounting bracket (Q) on top of the first mounting bracket (Q). Open side of bracket facing up.
- Place the hitch mount assembly (8) on the mounting brackets (Q)
- Using two U-bolts (R) secure the hitch mount assembly (8) with two mounting brackets (Q), four washers (S), and four hex nuts (T). Do not tighten.
- If the slider tube does not fully extend into both U-bolts (R), then loosen the appropriate hex bolt (C) and reposition the slider tube (7).
- Center the hitch mount assembly on the tractor frame.
- Tighten all hex bolts and hex nuts.

Note: Depending on your mower, U-bolts may need to be installed at an angle.

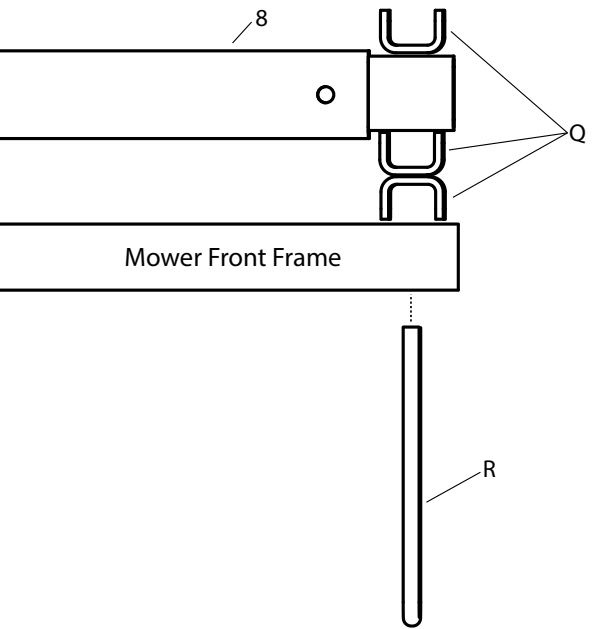

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED FOR ASSEMBLY

- (2) Adjustable Wrench
- (2) 7/16" Wrenches
- (2) 1/2" Wrenches
- (2) 9/16" Wrenches

ASSEMBLE THE HITCH MOUNT
ASSEMBLY

STEP 1: (SEE FIGURE 1)

- Insert a slider tube (7) into each end of the hitch mount assembly (8).
- Attach the slider tube to the hitch mount assembly using two hex bolts (C), four washers (L), and two Nylock hex nuts (H). Do not tighten.

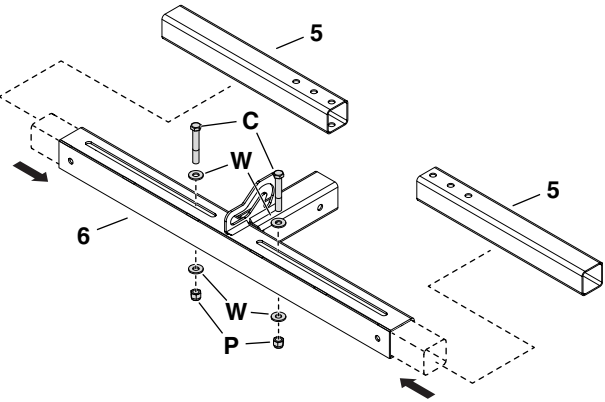


FIGURE 1

STEP 2: (SEE FIGURE 2)

- Attach the hitch mount assembly (8) to the tractor frame using two U-bolts (6) secured with two mounting brackets (5), four washers (J), and four Nylock hex nuts (E). Do not tighten.
- If the slider tube does not fully extend into both U-bolts (6), then loosen the appropriate hex bolt (C) and reposition the slider tube (7).
- Center the hitch mount assembly on the tractor frame.
- Tighten all hex bolts and hex nuts.

Note: Depending on your mower, U-bolts may need to be installed at an angle.

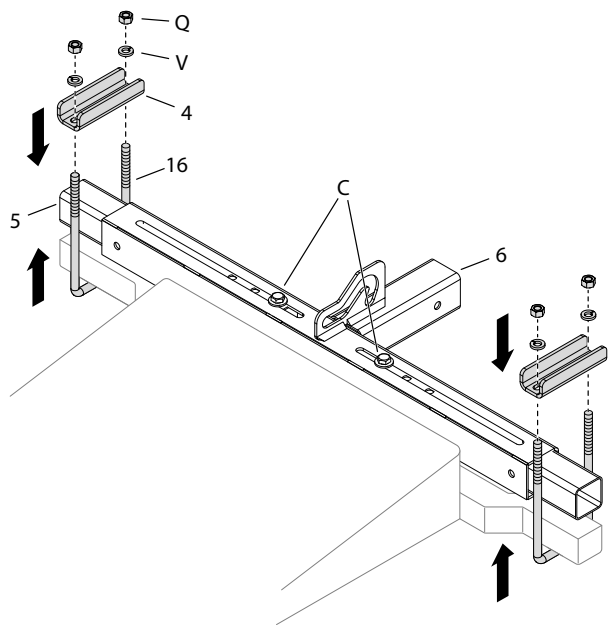


FIGURE 2

Note: Do not overtighten the hex bolts

ASSEMBLE THE TUBE FRAME ASSEMBLY

STEP 3: (SEE FIGURE 3)

- Attach the tube frame (10) to the receiver hitch frame (9) using a hex bolt (D) and a Nylock hex nut (F). Do not tighten yet.
- Attach the rear tube frame (11) to the receiver hitch frame (9) using two hex bolts (D) and two Nylock hex nuts (F). Do not tighten yet.

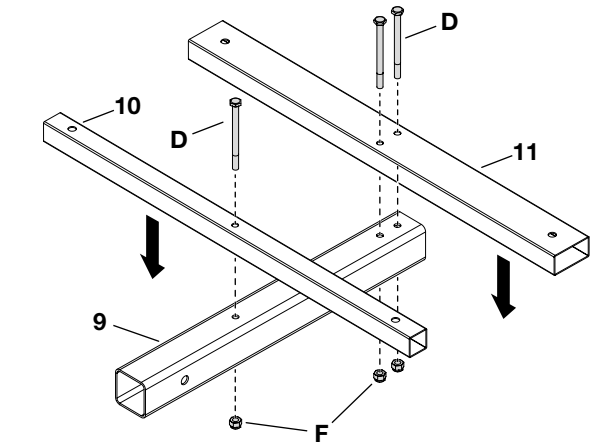


FIGURE 3

ATTACH TUBE FRAME ASSEMBLY TO THE TANK

STEP 4: (SEE FIGURE 4)

- Attach the tube frame assembly to the 15 gallon tank assembly (3) using four hex bolts (B) and four spacers (M).
- Now tighten tube frame bolts from Step 3.

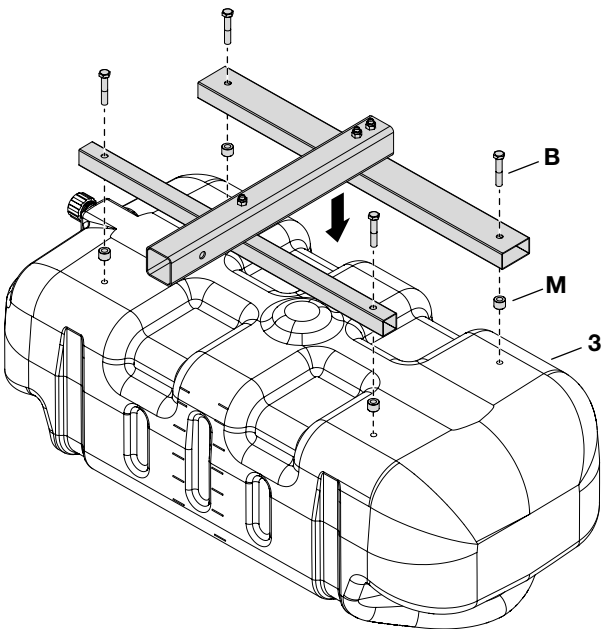


FIGURE 4

ATTACH THE TANK ASSEMBLY TO THE HITCH MOUNT ASSEMBLY

STEP 5: (SEE FIGURE 5)

- Attach the tank assembly to the hitch mount assembly using one clevis pin (N) and one hair cotter pin (O).

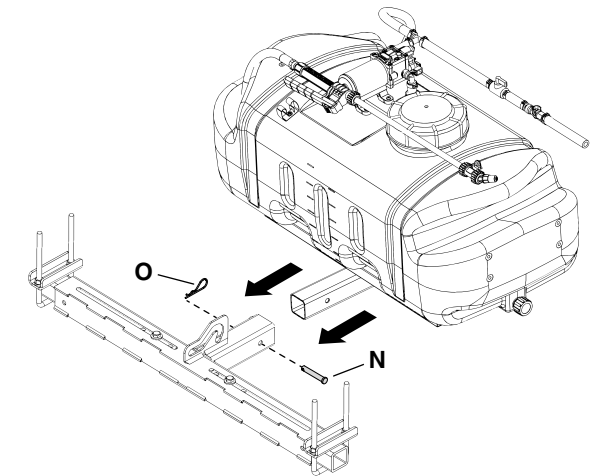


FIGURE 5

ATTACH THE BOOM ASSEMBLY TO THE BOOM SUPPORT BRACKET

STEP 6: (SEE FIGURE 6)

- Attach the boom support rods (4) to the boom assembly (1) using four hex nuts (I).
- Attach the boom support rods (4) to the boom support bracket (2) using four hex nuts (I)

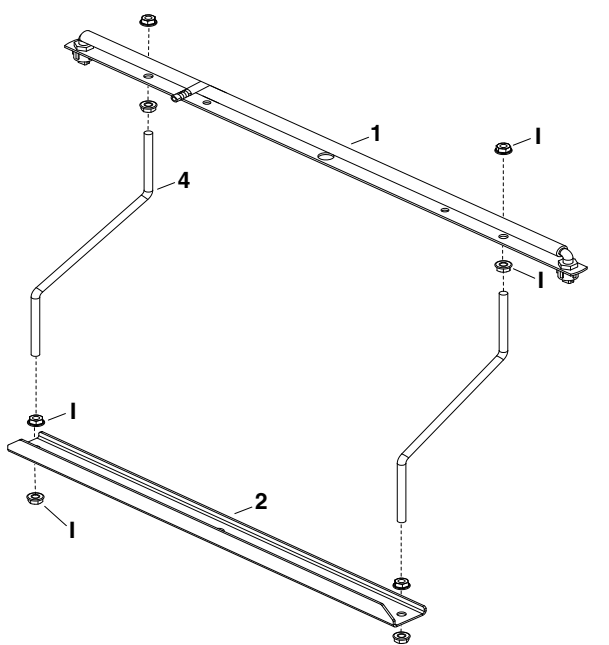


FIGURE 6

ATTACH THE BOOM SUPPORT BRACKET TO THE TRACTOR HITCH

STEP 7: (SEE FIGURE 7)

- Attach the boom support bracket (2) to the tractor hitch using one hex bolt (A), two washers (K), and one hex nut (G).

Note: May require hitch kit 45-0596

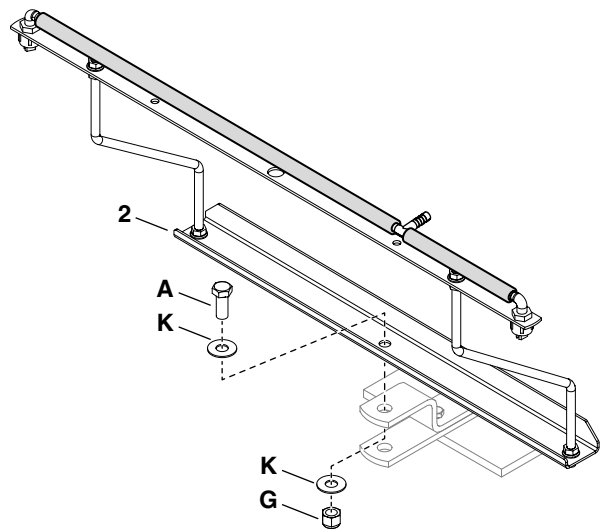


FIGURE 7

CONNECT TANK HOSE TO THE BOOM ASSEMBLY

STEP 8: (SEE FIGURE 8)

- Attach the tank hose to the 3/8" tee barb on the boom assembly .

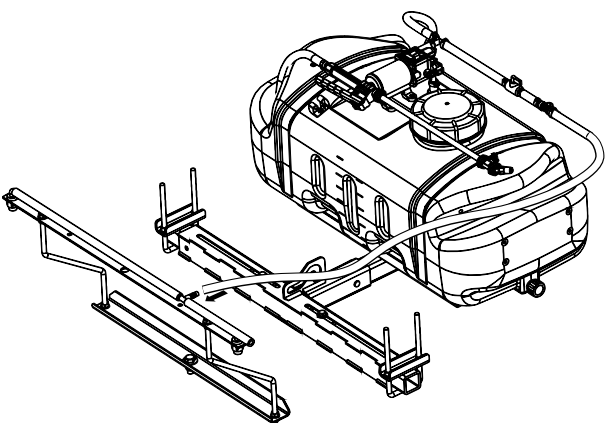


FIGURE 8

ATTACH WIRE HARNESS TO THE BATTERY

STEP 9: (SEE FIGURE 9)

- Attach ring terminals to the correct battery terminals (Note: Red to Red and Black to Black).
- Connect the wire harness switch (12) to the wire harness battery (13).
- Route the wire harness switch towards the sprayer using the plastic wire harness clips (P).
Note: Be sure to secure the harness clear of exhaust, fans, and pinch points.
- Attach the wire harness switch (12) to pump harness.

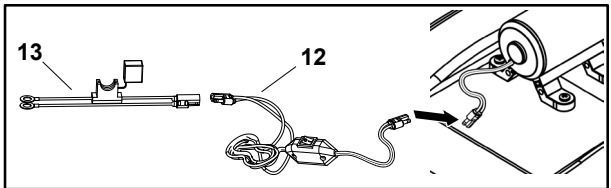


FIGURE 9